


## Display

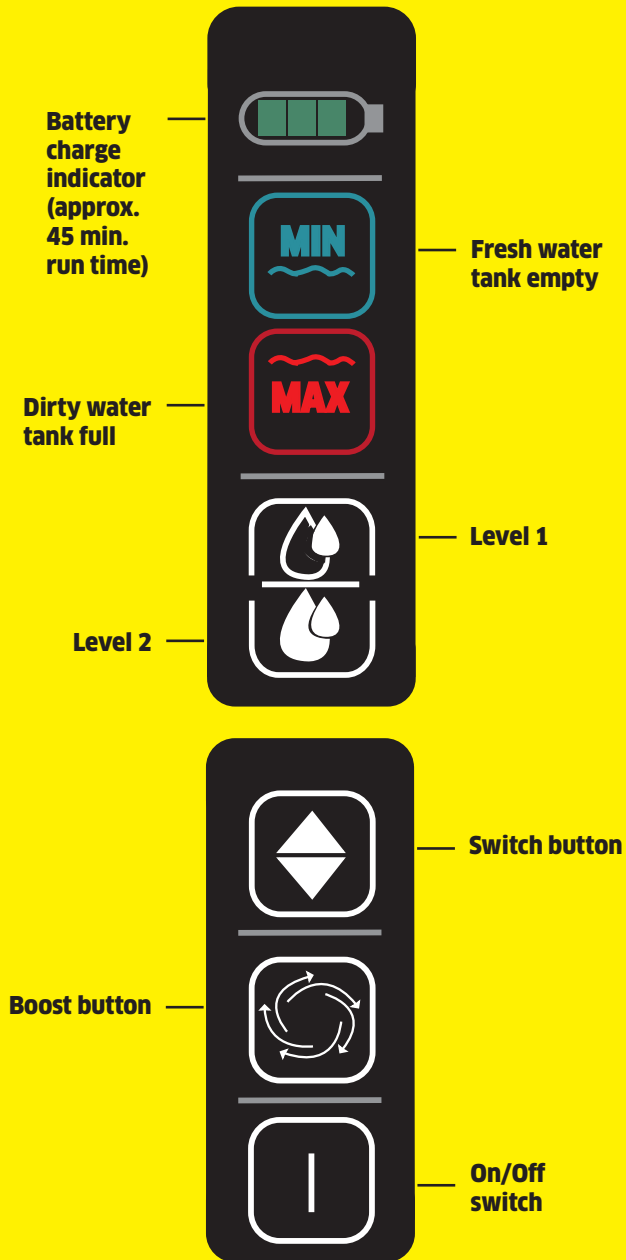

Scan code for videos




[www.kaercher.com/fc7](http://www.kaercher.com/fc7)

**KÄRCHER**


ROBOT WORLD

# FC 7 CORDLESS QUICKSTART GUIDE

## First assembly

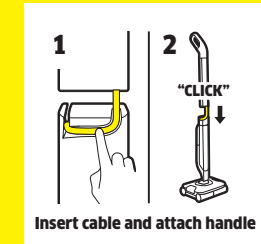

## First steps before use

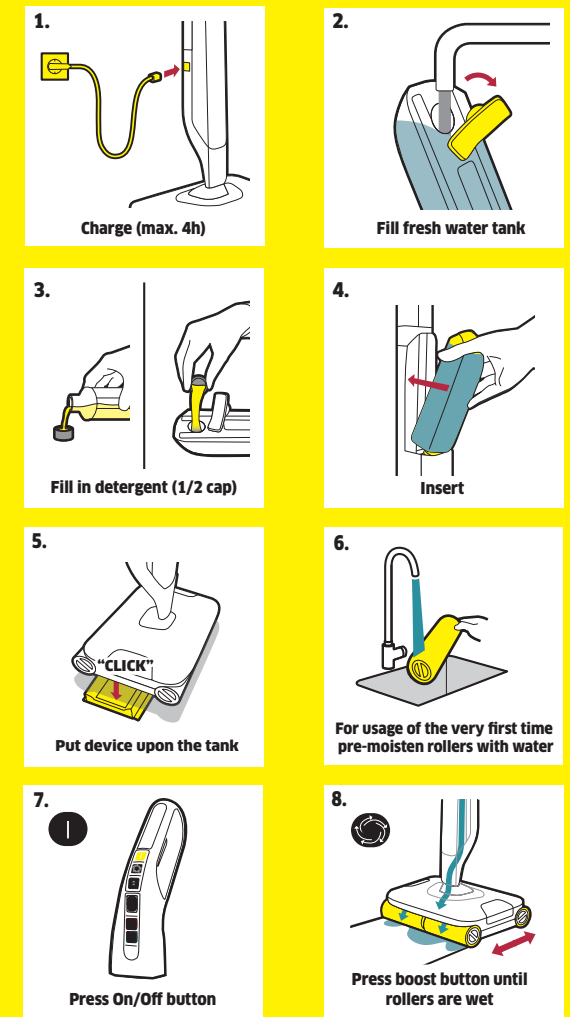







## Switch cleaning mode







## Activate boost function



## Refill fresh water tank







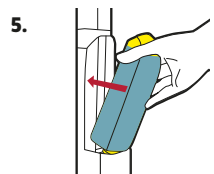
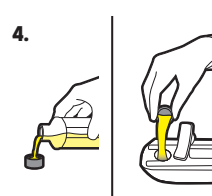
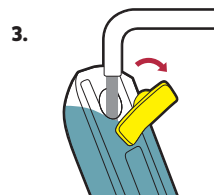
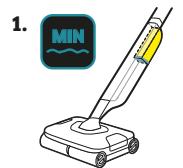


## Empty dirty water tank

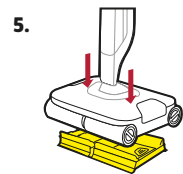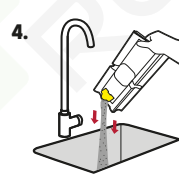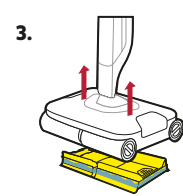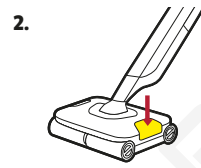

## Cleaning and storing

### Step 1: Clean the device

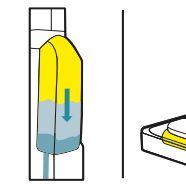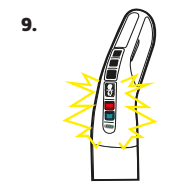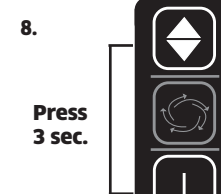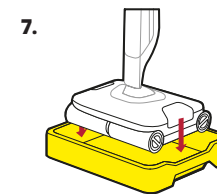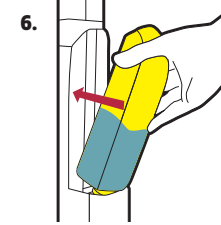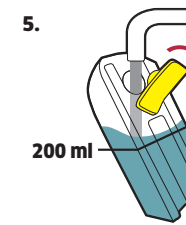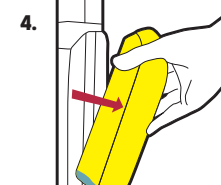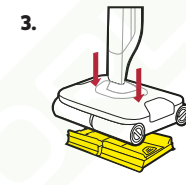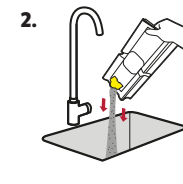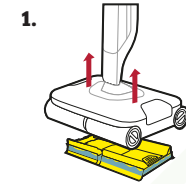

Please wait about 2 min.

### Step 2: Store the device

